


IRISMO WIREFREE


Quick Installation Guide

1. How to use

1.1. OPEN the BUTTONS (Fig 1)

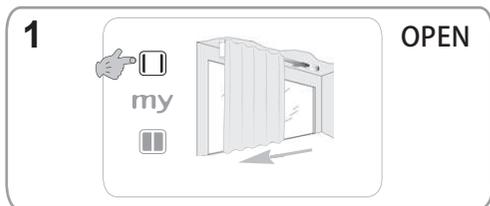

1.2. CLOSED the BUTTONS (Fig 2)

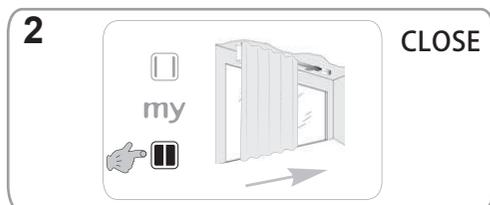


1.3. STOP FUNCTION (Fig 3)




1.4. FAVOURITE POSITION (Fig 4)




2. Connect motor to the Rail (Fig 5)

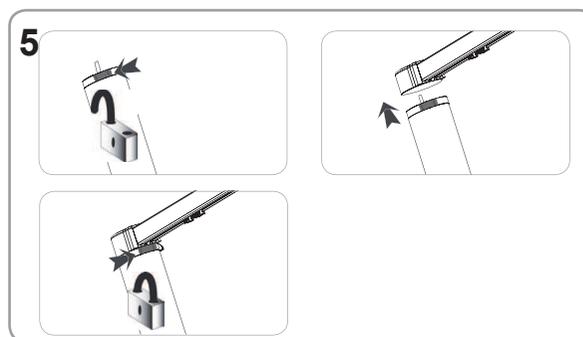

3. Connect battery Pack (Fig 6)

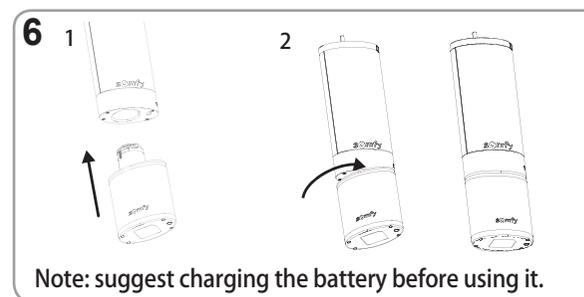

4. Charge the battery (Fig 7)

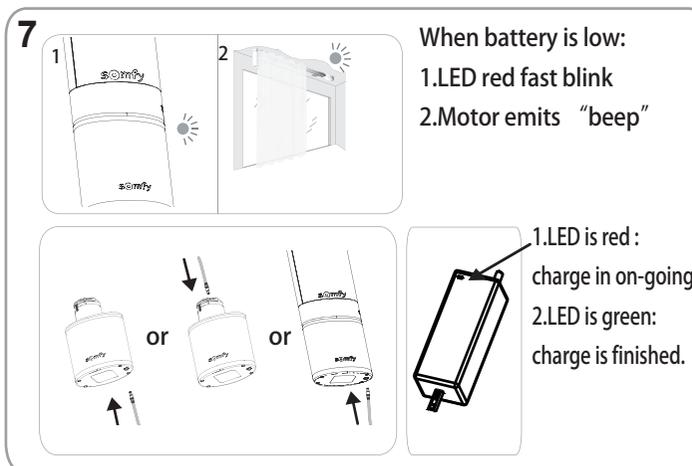


5. Set my position (Fig 7)



Press Open or Close button to move the curtain to the position you want, press my for ≈5s until the curtain moves, the setting is ok.

6. Delete my position (Fig 8)

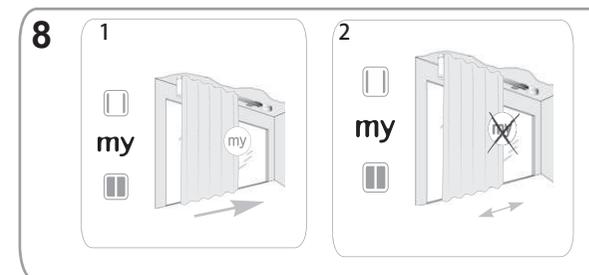

Press my to move curtain to my position, press my for ≈5s, the setting is deleted.

Failure Check

Observations	Possible causes	Solutions
The motorised product does not operate.	The battery pack is weak.	Check whether the battery pack is weak and charge it.
	The remote control battery is weak.	Check whether the battery is weak and replace it if necessary.
	The remote control is not compatible.	Check for compatibility and replace the remote control if necessary.
	The remote control used has not been programmed into the motor.	Use a programmed remote control or program this remotr control

Remarks: For the detailed information, please refer to the instructions.