

CONTACT

www.bradleycollection.com



UK & REST OF THE WORLD

☎ +44 (0)1449 722 724

✉ info@bradleycollection.com

USA & CANADA

☎ +1 (310) 815 8255

✉ info.us@bradleycollection.com


THE BRADLEY COLLECTION

STEEL

the**bradley**collection

Specialised fixings for mounting brackets will be required in certain situations and are not provided as standard.
Steel items are not recommended for damp conditions such as shower rooms.
Crystal finials and acrylic poles should not be positioned in direct sunlight, and are not suitable for use in conservatories.
Fluid Metal items are supplied unlacquered and will tarnish over time.

The Bradley Collection reserves the right to modify design and materials without prior notice as part of a process of continual product improvement.

Products are protected by Design Rights, under provisions of Copyright, Designs & Patents Act 1988.
Bradley®, The Bradley Collection® and  Logo are registered Community trademarks of The Bradley Collection Ltd. in Europe and registered trademarks of the Bradley Collection, Inc. in the USA.

The Bradley Collection Ltd Lion Barn • Maitland Road • Needham Market • Suffolk • IP6 8NS • UK

Published: 1021 • Copyright © The Bradley Collection Ltd. 2022

INSTALLATION INSTRUCTIONS

STEEL

INSTALLATION INSTRUCTIONS

THANK YOU FOR YOUR ORDER

Before fitting this product please ensure that you have thoroughly read these instructions.

We have taken every care to design and manufacture a quality system; incorrect installation could lead to poor performance.

If any queries arise when reviewing these instructions or during installation please feel free to contact us for assistance. We will be glad to talk you through the process.

Please retain these instructions for future reference.

Fixings


As a courtesy we have supplied a set of fixings for the system.

These screws and wall plugs are designed to be used in wood and brick walls. We understand our systems may be used on a variety of materials; drywall, aluminium and steel stud, or lath and plaster.

To properly secure a system onto these or other types of surfaces; appropriate fixings must be independently obtained.




Assess your own wall construction and source the appropriate screw type. Please note that the enclosed fixings may not be suitable for all wall types.

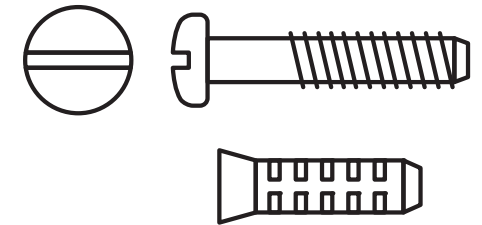

Tools

For the installation of the system the following items may be required.

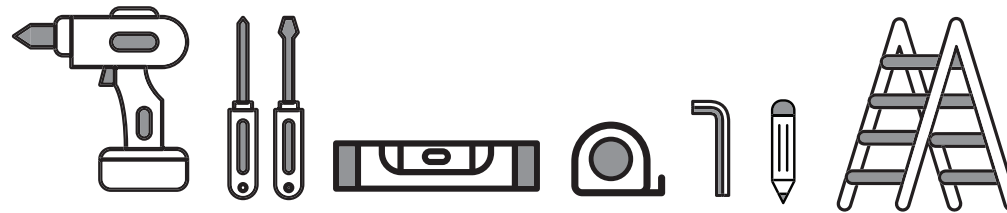

Care & Maintenance

This pole can be cleaned using a soft cloth and furniture polish.




Please do not use any solvent or chlorine based cleaners as this will damage the finish.

Bracket positioning and fixing

Side brackets should be positioned approximately 100mm (4") in from the end of the pole.

Single Brackets

To align the brackets, the top of the passing brackets should be fitted below the top of the side brackets. (see dimension Z)

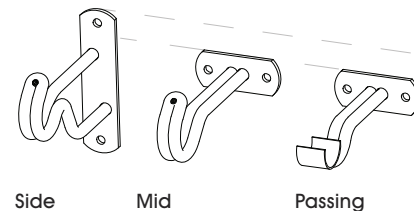


Dimension Z

Diameter	Dimension Z
19mm (3/4")	15mm (9/16")
25mm (1")	20mm (3/4")
38mm (1 1/2")	21mm (13/16")
50mm (2")	21mm (13/16")

Ceiling Bracket Alignment

To align the brackets, passing ceiling brackets should be fitted in line with ceiling brackets

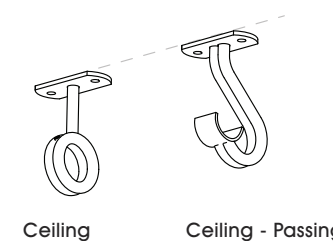

SHARE YOUR INSTALL
ON INSTAGRAM

 TAG: @bradleycollection

STEEL SINGLE & DOUBLE BRACKETS

Fitting Rings and Pole

 
Slide the curtain rings on to the pole, allowing approximately one ring for every 100mm (4"). On systems where passing rings are used ensure the open side of the ring is facing the wall.

Keep aside two rings, one for the outside of each end of the bracket.

Place the pole on the brackets, making sure that the overhangs at each end are equal. If the pole is made of two connected lengths, the mid/passing bracket should cover the join.

Recess brackets

1. Use a suitable wall fixing when attaching the plate to the wall.
2. Drop the pole into place.
3. Lock in position by tightening the set screw.
4. If you need it to secure your drapes to the end of the pole. use the eyelet in the bottom of the bracket. This can be unscrewed if needed



Joining the pole

Poles are supplied pre-cut to your specified lengths, in some cases the pole may be made in two or more parts, joined by a connector.

Push the joiner into the pole ends and push the poles together. Tighten the set screws at the back of the pole.

Finials

Attach the finials by pushing them into position and tightening the set screws either at the back of the pole or on the finial.

Bracket Positioning & Fixing

Side brackets should be positioned approximately 100mm (4") from the ends of the pole.

Mark the position of the brackets. for longer poles a mid/passing bracket is required. For bay window poles, passing brackets are used in conjunction with passing curtain rings.


Drill holes & insert plugs.

Screw each bracket into position.

Passing Brackets

The pole snaps into the passing bracket. this operation should only be done once, as repeated attempts can damage the finish.

Ensure that the pole is in the correct position first. Then gently pull the pole down whilst holding the bracket up.

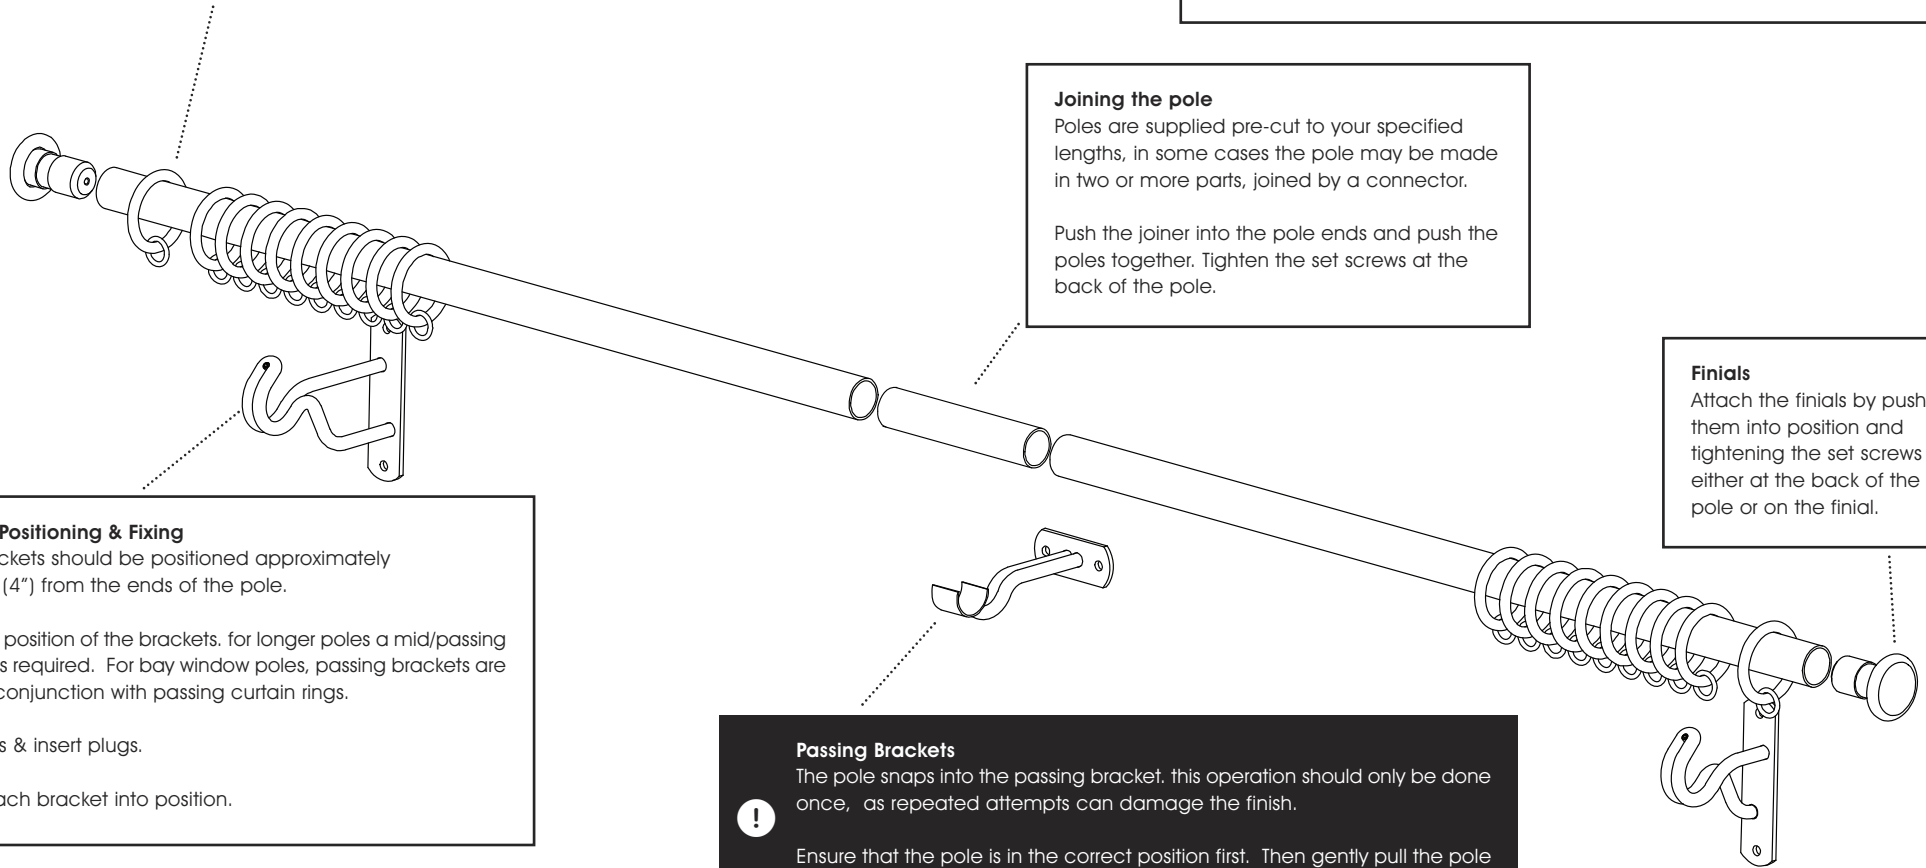

STEEL CEILING BRACKETS


Bracket Positioning & Fixing

Ceiling brackets should be positioned approximately 100mm (4") from the ends of the pole.

Mark the position of the brackets. For longer poles a mid/passing bracket is required. For bay window poles, passing brackets are used in conjunction with passing curtain rings.

Drill holes & insert plugs.

Screw each bracket into position.

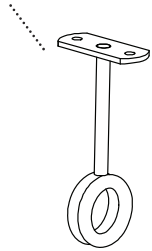

Passing Brackets

The pole snaps into the passing bracket. This operation should only be done once, as repeated attempts can damage the finish.

 


Ensure that the pole is in the correct position first. Then gently pull the pole down whilst holding the bracket up.



Finials

Attach the finials by pushing them into position and tightening the set screws either at the back of the pole or on the finial.




Fitting Rings and Pole

Slide the curtain rings on to the pole, allowing approximately one ring for every 100mm (4"). On systems where passing rings are used ensure the open side of the ring is facing the wall.

Keep aside two rings, one for the outside of each end of the bracket.

Place the pole on the brackets, making sure that the overhangs at each end are equal. If the pole is made of two connected lengths, the mid/passing bracket should cover the join.

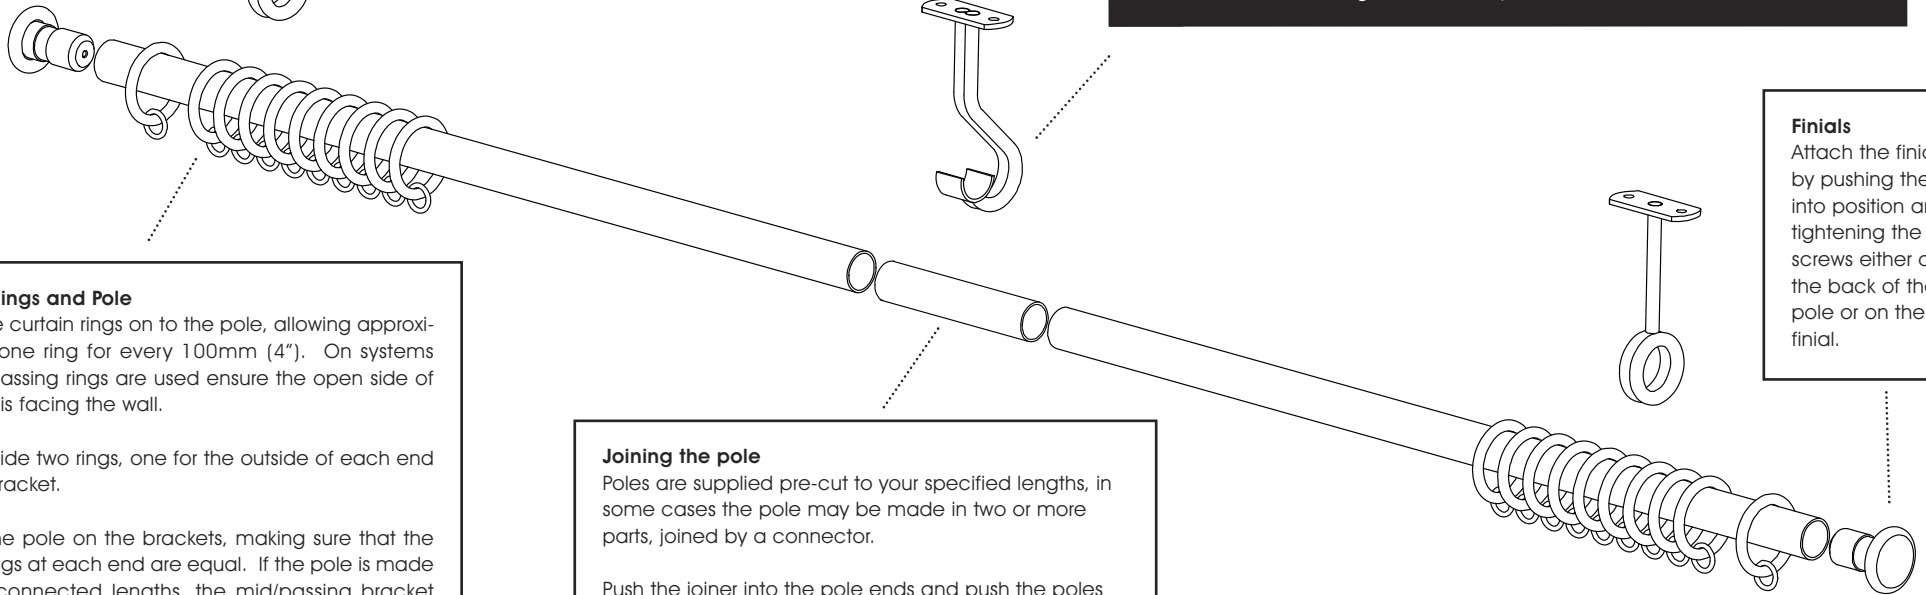

Joining the pole

Poles are supplied pre-cut to your specified lengths, in some cases the pole may be made in two or more parts, joined by a connector.

Push the joiner into the pole ends and push the poles together. Tighten the set screws at the back of the pole.

STEEL FRENCH BRACKETS

Fitting Rings and Pole

Slide the curtain rings on to the pole, allowing approximately one ring for every 100mm (4"). On systems where passing rings are used ensure the open side of the ring is facing the wall.


Keep aside two rings, one for the outside of each end of the bracket.

Push the pole on the brackets, and tighten the set screw. If the pole is made of two connected lengths, the mid/passing bracket should cover the join.

Bracket positioning and fixing

Single Brackets

To align the brackets, the top of the passing brackets should be fitted below the top of the side brackets. (see dimension Z)

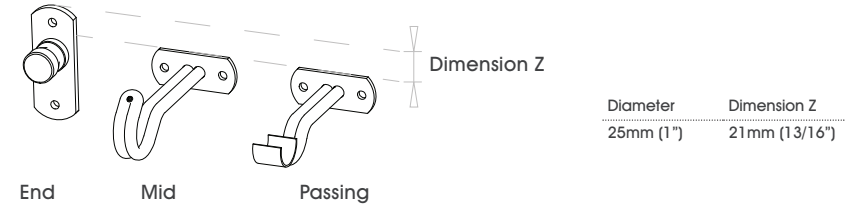

Joining the pole

Poles are supplied pre-cut to your specified lengths, in some cases the pole may be made in two or more parts, joined by a connector.

Push the joiner into the pole ends and push the poles together. Tighten the set screws at the back of the pole.

Ring Stop

To hold the curtain back to the wall place a ring between the bracket and the set screw.

Bracket Positioning & Fixing

Mark the position of the brackets. For longer poles a mid/passing bracket is required. For bay window poles, passing brackets are used in conjunction with passing curtain rings.

Drill holes & insert plugs.

Screw each bracket into position.

Passing Brackets

The pole snaps into the passing bracket. This operation should only be done once, as repeated attempts can damage the finish.

Ensure that the pole is in the correct position first. Then gently pull the pole down whilst holding the bracket up.

